



Ultrasonic Blue-Light Diffuser Operating Manual

Operating Instructions

1. Remove Lid and Dispersal nozzle
2. Fill the tank with water to the maximum line (stop at the lip in the tank).
DO NOT FILL PAST THE MAX LIP. Do not get water in the power supply area.
3. Add 3-8 drops of your favorite oil to the water.
4. Replace the lid and nozzle.
5. With dry hands plug the power supply into the unit and standard outlet (it will make a noise and blink blue to assure power is going to the machine.)
6. Press the Power/Vol button to turn the machine on. The default intensity is low.
(Press Power/Vol a second time for medium intensity, and another time for High. To switch off machine you may have to press 3 times.)
7. Select the preferred time setting listed from 1 to 5 under time control in manual. Press Timer 1-5 times to choose the correct setting.
8. The LED LIGHT can be turned on or off as desired by pressing the Light button located under the timer bars.
9. NOTE: never immerse in water and do not overfill.

For best results and a long life for your Ultrasonic Diffuser, we do not recommend using any of the thicker essential oils as they will clog up the inner mechanics of your diffuser over time. These oils are not recommended for use in any Ultrasonic Diffuser:

Patchouli, Benzoin, Rose Otto 10%, Jasmine Absolute 10%, Neroli 10%, Sandalwood, Vanilla

Cleaning Instructions

Wipe out unit with soft cloth when discontinuing use. Clean unit thoroughly 1-2 times a week or when a new oil is used. When cleaning the machine please follow these steps:

1. Remove remaining water from tank. (Do not get the power supply area wet.)
2. Place a cap full of Rubbing Alcohol in the tank and let sit for 2-3 min. Do not use any cleaning agent. This will keep the unit in good working order and maximize the atomizing rate.
3. Wipe the tank with a soft cotton cloth or paper towel to remove any sediment left from water or essential oils.

DO NOT TRY CLEANING BY IMMERSING IN WATER
NOT DISHWASHER SAFE

Solving problems

When switched on the unit doesn't operate:

Check the power supply cord going into the machine and make sure it is securely in the unit.
Check the power cord going to the household outlet and ensure it is properly plugged in.
Change to another outlet in the house.
Check the water level. Fill to the maximum line (lip on the machine) DO NOT OVER FILL.

No dispersal or less than usual

Check the water level and be sure it is correct.
Check to see if the level sensor is jammed.(2)
Check to see if the transducer (5) or Metal Plate is clean (NOTE: PLEASE FOLLOW CLEANING INSTRUCTIONS)
Check to see if the top cover(3) is securely fitted.
Check the power supply area in the machine if it has gotten wet the machine may have shorted.
Restart machine buy unplugging and re plugging.