




Ultrasonic Cone Diffuser Operating Manual

Operating Instructions:

1. Remove the dispersal nozzle and cover (# 4 & 5)
2. Fill the water tank (# 1) with water. The maximum level is 3.25cm, approximately 0.5cm below water blocking cover. There is an invisible line inside you can feel.
3. Add 3 to 5 drops of your favourite essential oil to the water.
4. Replace the dispersal nozzle and cover (# 4 & 5). To remove lid and replace lid you have to twist to the left to put on.
5. Dry hands and plug the adaptor into a standard household outlet.
6. Press the MODE switch (#8) to turn on the unit. The default setting is 15 minutes and LOW output.
7. To adjust output level, push MODE switch (#8), which will rotate through LOW (Green Light) MID (Yellow Light) HIGH (Red Light).
8. To select the preferred time period, press the TIME switch (#7), which will rotate through 15 minutes* (Green Light) 30 minutes* (Yellow Light) AUTO/ 4 hours* (Red Light) (* 15 minutes: stop after 15 minutes; 30 minutes: stop after 30 minutes; AUTO/ 4 hours: automatically stop when the minimum water level is reached; or stop after 4 hours.)
9. Press and hold the MODE switch (#8) for 2.5 seconds to stop the unit any time.
10. Do not immerse the unit in water and do not overfill.

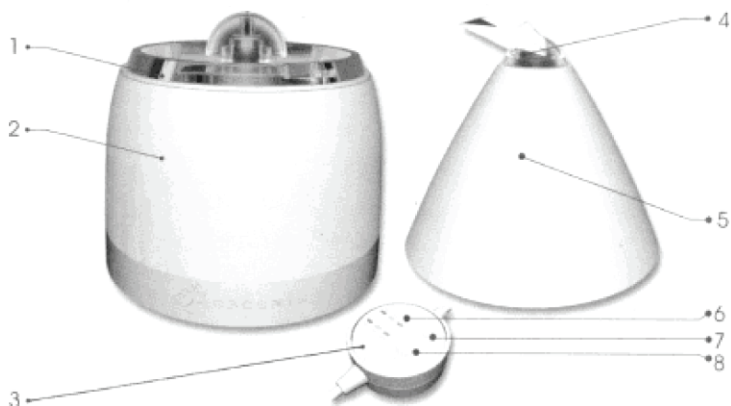

- | | | |
|---------------------|--|---------------------|
| 1. Water tank | 4. Directional dispersal nozzle (with optional general dispersal nozzle) | 5. Cone-shape cover |
| 2. Main case | 6. LED lights | 7. TIME switch |
| 3. Power controller | | |

For best results and a long life for your Ultrasonic Diffuser, we do not recommend using any of the thicker essential oils as they will clog up the inner mechanics of your diffuser over time. These oils are not recommended for use in any Ultrasonic Diffuser:

- Patchouli
- Benzoin
- Rose Otto 10%
- Jasmine Absolute 10%
- Neroli 10%
- Sandalwood
- Vanilla

Solving Problems DIY

Problem	Solution
When press the MODE switch, the unit does not operate	Check the power supply is securely plugged in to the socket at the back of the unit
	Check the main plug is securely plugged into the wall socket.
	Check that the water level is correct and there is water in the tank.
Low dispersal or lower than usual	Check for correct water level.
	Check if the water level sensor is jammed.
	Check to see if the transducer is clean; do not use any cleaning agents (see instruction).
	Adjust output control.
	Check to see if the top cover is securely fitted.
	Restart the unit.

Safety Instructions

1. Please follow the instructions to operate the product.
2. Do not use any unapproved apparatus to operate the unit.
3. Water level should not be more than 3.25cm (around 0.5cm below water blocking cover). Over-filling with water may cause damage to the unit.
4. Plug-in the power supply only after filling the unit with water. Make sure to match the plugs with the holes when plugging in or you could damage your cord.
5. Keep the unit on a flat and secure surface at all times.
6. If moving the unit, ensure you unplug the unit from the power supply.
7. Do not operate the unit with wet hands.
8. Unplug the unit once you have finished using it.
9. Should a problem arise, unplug the unit. Do not attempt to open the unit; repairs should be carried out by a qualified service center only.
10. The unit will automatically stop working once the water level reaches a minimum level.
11. For indoor use only, keep away from young children and animals.

Major Specifications:

External Dimension	16cm x 16cm x 23.7cm
Transformer	110V – 24V / 750mA
Maximum working voltage	24V / 650mA
Maximum input	15W
Operation frequency	1.66MHZ ± 50KHZ
Atomizing rate	50~60ml / hr (max)
Particle size	Approx. 3 micro-meter
Controls	MODE switch: On/ Off switch
	Default setting is 15 minutes
	TIME switch: 3 settings 1. Green light: 15 minutes - stops after 15 minutes; 2. Yellow light: 30 minutes - stops after 30 minutes; 3. Red light: AUTO/ 3 hours - automatically stop when the minimum water level is reached; or stop after 3 hours.
Accessory	Main case, 25V transformer, dispersal nozzle, white cone-shape cover
Water level	3.25cm (0.5cm below water blocking cover)
Water level safety stop	Stop automatically when the minimum water level is reached
Capacity of tank	300ml

Care and Maintenance

Regular care and maintenance will allow you to use a wider range of aroma blends and essential oils. This requires wiping down the lid, inner vault, and vibrating disc with rubbing alcohol to remove any sticky residue and prevent clogs. This should be done between fragrances or up to once a week if using any of the more viscous oils. This regular maintenance will help to preserve the operation of your machine.